

Underwater Housing for Nikon S7000 Product Number 6282.70 Instruction Manual

Thank you for your purchase of Ikelite equipment. Please read the "Instruction Manual" and "Supplemental Instructions" completely before attempting to operate or dive with this product.


Supplied Accessories

- 0200.08 Vinyl Port Cover
- 0321.10 Safety Lanyard
- Flash Diffuser
- Flash Deflector
- 0184.1 Silicone Lubricant
- Extra Control Tips and Sleeves

Housing Specifications

3 1	
Controls	All camera functions
Width5	5.8 in (147 mm) including controls
Height	4.6 in (117 mm) including controls
Depth	4.9 in (125 mm) including controls
Weight	1.7 lb (771 g)
Buoyancy	Slightly positive in freshwater
Depth Rating	200 ft (60 m)
Built-in Flash	Yes
Strobe Connection	Slave or Fiber Optic
Main O-Ring	0132.45
Port O-Ring	0103
Port Outer Diameter3	3.9" (99 mm)
Use 46mm Lenses	No
Use 67mm Lenses	Macro lenses only with 9306.82 Macro Adapter
Use Bayonet Lenses	No

Parts of the Housing

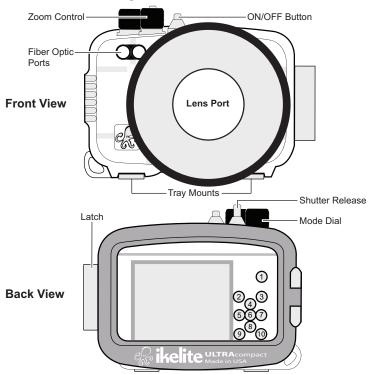

- Playback Button
- 3. (Wi-Fi) Button
- 4. **\$** A Flash Mode, Up Arrow
- 5. ■ Self-timer, Left Arrow

- 6. **OK**/Apply Selection Button
- 7. **★** Exp. Comp./Right Arrow
- 8. Macro Mode/Down Arrow
- 9. **MENU** Button
- 10. Delete Button

Initial Camera Settings (before placing camera in housing)

- Insert a fully charged battery.
- Set Shooting Mode to (*Auto Mode.")

In Shooting Menu:

Set Image mode to "16m."

Set White balance to "Auto." Always use AUTO white balance (AWB) when using a strobe/flash. When recording video or using a UR-Pro color filter without strobes, AWB can still be used, but for more accurate and consistent colors we recommend setting Manual white balance. Manual white balance should be reset for each working depth due to color absorption caused by the water.

Set Continuous to "S" Single.

Set ISO sensitivity to "200."

Set AF area mode to "Center" and Autofocus Mode to "AF-S" Single AF.

- In Setup Menu:

Set Time Zone and Date.

In Monitor Settings set Image Review to "ON."

Set Photo VR to "On."

Set AF-assist beam and Digital Zoom to "Off."

Set Auto off to "5 min."

Insert and format a memory card.

- Set Flash Mode to "Fill flash ."

External Accessory Lenses

 
WD-4 Wide-Angle Conversion Dome 6430.4

The removeable WD-4 corrects light refraction underwater, restoring the camera's original angle of coverage. Approximately 3/4 of the camera's zoom range can be used with the dome in place. Slight vignetting may occur at camera's widest angle setting.



External Macro Adaptor 9306.82


Allows attachment of 67mm threaded macro lenses from Inon and Epoque. NOT for use with 67mm threaded wide-angle lenses.



Note: Other wide angle conversion or accessory lenses cannot be used with this housing.

AF35 Strobe Package 4035

The AutoFlash AF35 kit is a great compliment, and an effortless, affordable way to add a flash to your new lkelite point and shoot camera system. Everything you need to get started is in the box. Just attach it to the bottom of your housing and start taking pictures!

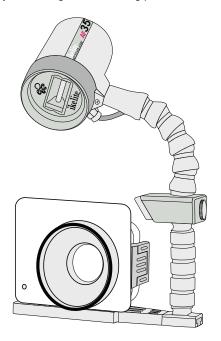

The AF35 Strobe Package is available to support your housing along with a full range of accessories. Please visit **ikelite.com** to see the most current information about recommended accessories for your housing.

Customer Support

Please read the troubleshooting section of the "Instruction Manual" before contacting Ikelite.

Limited Warranty

This Ikelite product is warranted against any manufacturing defects for a period of one (1) year from the original date of purchase. Defective products should be returned to Ikelite postage paid. Ikelite will, at its sole discretion, repair or replace such products, and will return to customer postage paid. All other claims of any nature are not covered. Except as mentioned above, no other warranty expressed or implied applies to this Ikelite product.



Ikelite Underwater Systems 50 West 33rd Street Indianapolis, IN 46208 USA

ikelite.com