



Update Kit for Nikon Z6 II, Z7 II

Product # 9295.09

Included in the Box

- Nylon washer
- Camera mount # 95416

Housing Compatibility


- Ikelite 200DL Underwater Housing for Nikon Z6, Z7 # 71063

This update kit is only required for housings produced before January 1, 2021 (serial numbers below 74000).

Installation and Use

Control Requiring Adjustment


- Photo/Movie Selector

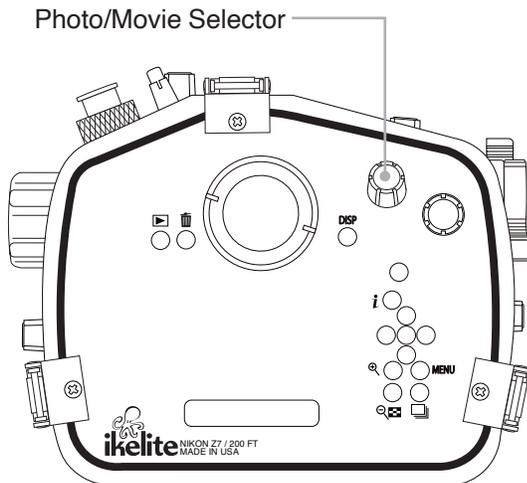

Adjusting Controls

1. The knob is attached by a set screw threaded into the side of the knob. Remove the knob by loosening the set screw using a hex key. Do not remove the control shaft from the housing.
2. Add the included nylon washer to the control shaft.

3. Align the knob set screw with the flat on the side of the control shaft.

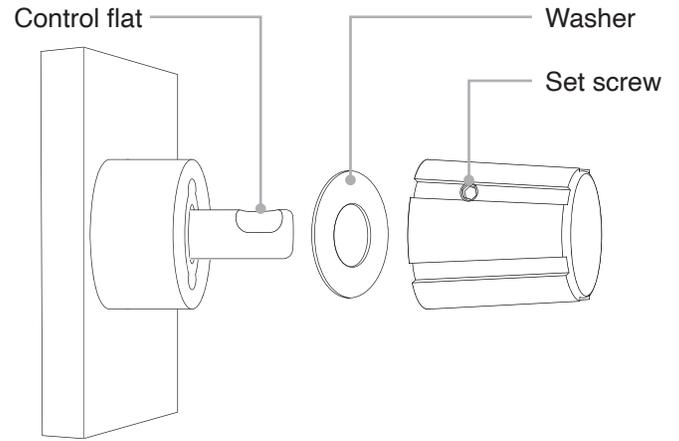

4. Re-attach the knob using a hex key or allen wrench.
5. Install your camera and check all controls. On the surface you may need to apply pressure to the control while rotating for proper operation.

Testing the Housing

1. Assemble the housing without a camera installed.
2. Submerge the housing in fresh water for several minutes.
3. Remove the housing from water and dry the outside of the housing with a clean, lint-free cloth.
4. Look through the back of the housing for signs that water has entered the housing. Signs include fogging or water droplets.
5. We recommend making at least one dive without a camera installed to ensure waterproof operation.
6. Install a Nikon Z6 II or Z7 II camera using the Camera mount # 95416.
7. Check controls operation.

Re-Adjusting Control for Z6, Z7 (Mark I)

This procedure is reversible. To use the original Z6 or Z7 cameras, use the same procedure to remove one washer from underneath the control knob for the Photo/Movie Selector.

Contact Us

ikelite@ikelite.com