



45° Viewfinder Compatibility for Ikelite Housings

This chart provides the correct 45° Magnified Viewfinder option, Type 1 or 3 or 2, for most Ikelite Housings for DSLR and Mirrorless Interchangeable Lens (MIL) cameras. The Straight Magnified Viewfinder operates properly in all installations.

We do not offer adapters for the use of Ikelite Magnified Viewfinders with housings produced by other manufacturer.

Nikon Cameras

	Housing	45° Viewfinder
Nikon D100	6810	Not confirmed
Nikon D200	6812	Not confirmed
Nikon D300	6812.3	Type 1 or 3
Nikon D3000	6801.30	Not confirmed
Nikon D300S	6812.31	Type 1 or 3
Nikon D3100	6801.31	Not confirmed
Nikon D3200	6801.32	Type 1 or 3
Nikon D3300	6801.33	Type 1 or 3
Nikon D3300, D3400	6801.34	Type 1 or 3
Nikon D40 Nikon D60	6804.1	Not confirmed
Nikon D50	6805.1	Not confirmed
Nikon D500	6812.5 71005 73005	Type 1 or 3
Nikon D5000	6801.50	Type 1 or 3
Nikon D5100	6801.51	Type 1 or 3

	Housing	45° Viewfinder
Nikon D5200	6801.52	Type 1 or 3
Nikon D5300	6801.53	Type 1 or 3
Nikon D5500, D5600	6801.55	Type 1 or 3
Nikon D600, D610	6812.6 6812.61	Type 2
Nikon D70	6807 6807.1	Type 2
Nikon D700	6812.7	Type 1 or 3
Nikon D7000	6801.70	Type 2
Nikon D7100, D7200	6801.71 6801.72 71001	Type 2
Nikon D750	6812.75 71007	Type 1 or 3
Nikon D7500	71017	Type 2
Nikon D80	6808.1	Not confirmed
Nikon D800	6812.8 71011	Type 1 or 3
Nikon D810	6812.81 71009	Type 1 or 3
Nikon D850	71015	Type 1 or 3

	Housing	45° Viewfinder
Nikon D90	6809.1	Type 2
Nikon Z7	71063	Type 3

Canon Cameras

	Housing	45° Viewfinder
Canon 1000D Rebel XS	6872.10	Not confirmed
Canon 100D Rebel SL1	6970.01 6970.03	Type 1 or 3
Canon 200D Rebel SL2	6970.05	Type 1 or 3
Canon 10D	6871.10 6871.11	Type 1 or 3
Canon 1100D Rebel T3	6872.11	Not recommended
Canon 1200D Rebel T5	6872.12	Not recommended
Canon 20D	6871.20	Type 1 or 3
Canon 300D Rebel	6870 6870.1	Not confirmed
Canon 30D	6871.30	Type 1 or 3
Canon 350D Rebel XT	6871.35	Not confirmed

	Housing	45° Viewfinder
Canon 400D Rebel XTi	6871.40	Not confirmed
Canon 40D	6870.40	Type 1 or 3
Canon 40D, 50D	6870.50	Type 2
Canon 450D Rebel XSi	6871.45	Type 2 Limited rotation
Canon 500D Rebel T1i	6871.50	Type 2 Limited rotation
Canon 550D Rebel T2i	6871.55	Type 2
Canon 5D	6871.05	Type 1 or 3
Canon 5D Mark II	6871.02 71700	Type 1 or 3
Canon 5D Mark III Canon 5DS, 5DS R	6871.03 6871.04	Type 2
Canon 5D Mark III, Mark IV Canon 5DS, 5DS R	6871.09 71702 73702	Type 2
Canon 600D Rebel T3i	6871.60	Type 2
Canon 60D	6870.60	Type 2
Canon 650D Rebel T4i Canon 700D Rebel T5i	6871.65	Type 2

	Housing	45° Viewfinder
Canon 6D	6871.06 71706	Type 2
Canon 6D Mark II	71720	Type 2
Canon 70D	6870.70	Type 2
Canon 7D	6871.07 71704	Type 2
Canon 7D Mark II	6871.08 71708	Type 2
Canon 80D	6870.80 71710	Type 2
Canon M5	6973.05	Type 1 or 3

	Housing	45° Viewfinder
Olympus E-330	6853.30	Not confirmed
Olympus E-410 Olympus E-420	6854.10	Type 2
Olympus E-500	6855	Not confirmed
Olympus E-510 Olympus E-520	6856.20	Not confirmed
Olympus OM-D E-M1 II	6952.02	Type 1 or 3
Olympus OM-D E-M5	6950.51	Type 2
Olympus OM-D E-M5 II	6950.52	Type 1 or 3
Olympus OM-D E-M10	6950.10	Type 1 or 3
Olympus OM-D E-M10 II	6950.12	Type 1 or 3
Panasonic G85 Panasonic G80	6961.08	Type 1 or 3
Panasonic GH3 Panasonic GH4	6860.03	Type 1 or 3
Panasonic GH5	71705	Type 1 or 3
Samsung NX1	6821.01	Type 2
Sony A7, A7R, A7S	6843.71	Type 1 or 3
Sony A7 II, A7R II, A7S II	6843.72 71472	Type 1 or 3

Olympus, Panasonic, Sony Cameras

	Housing	45° Viewfinder
Olympus E-1	6851	Not confirmed
Olympus E-3	6851.3	Not confirmed
Olympus E-30	6852.30	Not confirmed
Olympus E-300	6853	Not confirmed

	Housing	45° Viewfinder
Sony A7R III, A9	71473	Type 1 or 3
Sony A100	6841	Not confirmed
Sony A200	6841.20	Not confirmed
Sony A300 Sony A350	6841.35	Not confirmed
Sony A230 Sony A330 Sony A380	6841.38	Not confirmed
Sony A700	6841.7	Not confirmed
Sony A33 Sony A55	6842.55	Type 1 or 3
Sony A57 Sony A65	6842.65	Type 1 or 3