



## 45° Viewfinder Compatibility for Ikelite Housings

This chart provides the correct 45° Magnified Viewfinder option, Type 1 or 3 or 2, for most Ikelite Housings for DSLR and Mirrorless Interchangeable Lens (MIL) cameras. The Straight Magnified Viewfinder operates properly in all installations.

We do not offer adapters for the use of Ikelite Magnified Viewfinders with housings produced by other manufacturer.

# Nikon Cameras

	Housing	45° Viewfinder
<b>Nikon D100</b>	6810	Not confirmed
<b>Nikon D200</b>	6812	Not confirmed
<b>Nikon D300</b>	6812.3	Type 1 or 3
<b>Nikon D3000</b>	6801.30	Not confirmed
<b>Nikon D300S</b>	6812.31	Type 1 or 3
<b>Nikon D3100</b>	6801.31	Not confirmed
<b>Nikon D3200</b>	6801.32	Type 1 or 3
<b>Nikon D3300</b>	6801.33	Type 1 or 3
<b>Nikon D3300, D3400</b>	6801.34	Type 1 or 3
<b>Nikon D3500</b>	6901.35	Type 1 or 3
<b>Nikon D40</b> <b>Nikon D60</b>	6804.1	Not confirmed
<b>Nikon D50</b>	6805.1	Not confirmed
<b>Nikon D500</b>	6812.5 71005 73005	Type 1 or 3
<b>Nikon D5000</b>	6801.50	Type 1 or 3

	Housing	45° Viewfinder
<b>Nikon D5100</b>	6801.51	Type 1 or 3
<b>Nikon D5200</b>	6801.52	Type 1 or 3
<b>Nikon D5300</b>	6801.53	Type 1 or 3
<b>Nikon D5500, D5600</b>	6801.55	Type 1 or 3
	6901.56	Type 1 or 3
<b>Nikon D600, D610</b>	6812.6 6812.61	Type 2
<b>Nikon D70</b>	6807 6807.1	Type 2
<b>Nikon D700</b>	6812.7	Type 1 or 3
<b>Nikon D7000</b>	6801.70	Type 2
<b>Nikon D7100, D7200</b>	6801.71 6801.72 71001	Type 2
<b>Nikon D750</b>	6812.75 71007	Type 1 or 3
<b>Nikon D7500</b>	71017	Type 2
<b>Nikon D80</b>	6808.1	Not confirmed
<b>Nikon D800</b>	6812.8 71011	Type 1 or 3

	Housing	45° Viewfinder
<b>Nikon D810</b>	6812.81 71009	Type 1 or 3
<b>Nikon D850</b>	71015	Type 1 or 3
<b>Nikon D90</b>	6809.1	Type 2
<b>Nikon Z6, Z7</b>	71063	Type 3

## Canon Cameras

	Housing	45° Viewfinder
<b>Canon 1000D Rebel XS</b>	6872.10	Not confirmed
<b>Canon 100D Rebel SL1</b>	6970.01 6970.03	Type 1 or 3
<b>Canon 200D Rebel SL2</b>	6970.05	Type 1 or 3
<b>Canon 10D</b>	6871.10 6871.11	Type 1 or 3
<b>Canon 1100D Rebel T3</b>	6872.11	Not recommended
<b>Canon 1200D Rebel T5</b>	6872.12	Not recommended
<b>Canon 20D</b>	6871.20	Type 1 or 3
<b>Canon 300D Rebel</b>	6870 6870.1	Not confirmed

	Housing	45° Viewfinder
<b>Canon 30D</b>	6871.30	Type 1 or 3
<b>Canon 350D Rebel XT</b>	6871.35	Not confirmed
<b>Canon 400D Rebel XTi</b>	6871.40	Not confirmed
<b>Canon 40D</b>	6870.40	Type 1 or 3
<b>Canon 40D, 50D</b>	6870.50	Type 2
<b>Canon 450D Rebel XSi</b>	6871.45	Type 2 Limited rotation
<b>Canon 500D Rebel T1i</b>	6871.50	Type 2 Limited rotation
<b>Canon 550D Rebel T2i</b>	6871.55	Type 2
<b>Canon 5D</b>	6871.05	Type 1 or 3
<b>Canon 5D Mark II</b>	6871.02 71700	Type 1 or 3
<b>Canon 5D Mark III Canon 5DS, 5DS R</b>	6871.03 6871.04	Type 2
<b>Canon 5D Mark III, Mark IV Canon 5DS, 5DS R</b>	6871.09 71702 73702	Type 2
<b>Canon 600D Rebel T3i</b>	6871.60	Type 2
<b>Canon 60D</b>	6870.60	Type 2

	Housing	45° Viewfinder
<b>Canon 650D Rebel T4i</b>	6871.65	Type 2
<b>Canon 6D</b>	6871.06 71706	Type 2
<b>Canon 6D Mark II</b>	71720	Type 2
<b>Canon 70D</b>	6870.70	Type 2
<b>Canon 700D Rebel T5i</b>	6871.65	Type 2
<b>Canon 750D Rebel T6i</b>	71718	Type 2
<b>Canon 7D</b>	6871.07 71704	Type 2
<b>Canon 7D Mark II</b>	6871.08 71708	Type 2
<b>Canon 80D</b>	6870.80 71710	Type 2
<b>Canon M5</b>	6973.05	Type 1 or 3
<b>Canon R</b>	71760	Type 3

	Housing	45° Viewfinder
<b>Olympus E-1</b>	6851	Not confirmed
<b>Olympus E-3</b>	6851.3	Not confirmed
<b>Olympus E-30</b>	6852.30	Not confirmed
<b>Olympus E-300</b>	6853	Not confirmed
<b>Olympus E-330</b>	6853.30	Not confirmed
<b>Olympus E-410</b> <b>Olympus E-420</b>	6854.10	Type 2
<b>Olympus E-500</b>	6855	Not confirmed
<b>Olympus E-510</b> <b>Olympus E-520</b>	6856.20	Not confirmed
<b>Olympus OM-D E-M1 II</b>	6952.02	Type 1 or 3
<b>Olympus OM-D E-M5</b>	6950.51	Type 2
<b>Olympus OM-D E-M5 II</b>	6950.52	Type 1 or 3
<b>Olympus OM-D E-M10</b>	6950.10	Type 1 or 3
<b>Olympus OM-D E-M10 II</b>	6950.12	Type 1 or 3
<b>Panasonic G85</b> <b>Panasonic G80</b>	6961.08	Type 1 or 3
<b>Panasonic GH3</b> <b>Panasonic GH4</b>	6860.03	Type 1 or 3

## Olympus, Panasonic, Sony Cameras

Housing	45° Viewfinder
---------	----------------

	<b>Housing</b>	<b>45° Viewfinder</b>
<b>Panasonic GH5</b>	71705	Type 1 or 3
<b>Samsung NX1</b>	6821.01	Type 2
<b>Sony A7, A7R, A7S</b>	6843.71 71471	Type 1 or 3
<b>Sony A7 II, A7R II, A7S II</b>	6843.72 71472	Type 1 or 3
<b>Sony A7R III, A9</b>	71473	Type 1 or 3
<b>Sony A100</b>	6841	Not confirmed
<b>Sony A200</b>	6841.20	Not confirmed
<b>Sony A300</b> <b>Sony A350</b>	6841.35	Not confirmed
<b>Sony A230</b> <b>Sony A330</b> <b>Sony A380</b>	6841.38	Not confirmed
<b>Sony A700</b>	6841.7	Not confirmed
<b>Sony A33</b> <b>Sony A55</b>	6842.55	Type 1 or 3
<b>Sony A57</b> <b>Sony A65</b>	6842.65	Type 1 or 3