


Ikelite Digital Housing

supplemental instructions

for

#6230.81 Olympus Stylus
Tough-8010, mju Tough-8010

ULTRAccompact Digital Housing

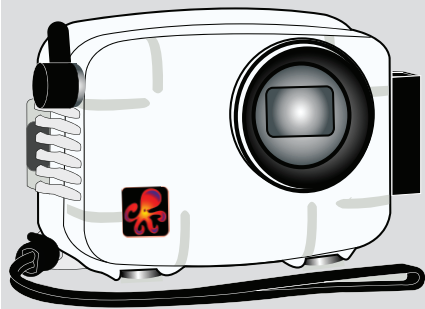

Camera Setup

1. Set camera to "P" Program Auto mode (camera icon).
2. Set ISO to 80.
3. Set camera to Macro Mode (not Super Macro).
4. Set White Balance to "Auto".
5. Set Flash to "Fill In" (lightning bolt displayed).
6. Set AF Mode to "Spot".
7. Turn ESP metering off. Set to "Spot"(rectangle with a dot inside).

NOTES:

- Camera will focus far away even if Macro Mode is on. It is best to leave Macro Focus on. You can back away from the subject and zoom in to avoid over-exposure if necessary.
- Flash does not work in Super-Macro mode.

Battery Warning

Turn the camera on before placing it in the housing to make sure the battery was installed correctly.

Ikelite W-20 Wide-Angle Conversion Lens #6420

For increased angle of coverage, add the Ikelite W-20 or other 67mm wide-angle conversion lenses. Ikelite 67mm Threaded Port Adapter #9306.78 is required to attach 67mm conversion lenses.

#9306.78 67mm Threaded Port Adapter

Allows attaching Ikelite W-20 Wide-Angle Conversion Lens #6420 with 67mm threads. Also allows attachment of Epoque, Type II Inon screw-on lenses, and macro lenses or diopters with 67mm threads. Includes larger size removable flash deflector.

 
 
#9306.85 Bayonet Port Adapter

Allows attaching INON UWL-105 AD, UWL-100 28AD, and UFL-165AD bayonet mount lenses.

NOTE: Slight edge softness around the picture edges is normal in some situations with conversion lenses. Vignetting can occur with the camera in it's widest angle setting. Zoom in to eliminate.

2

Housing Controls

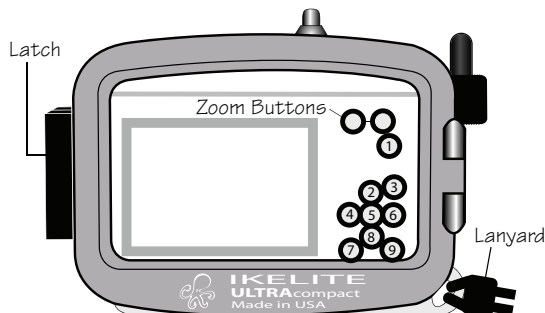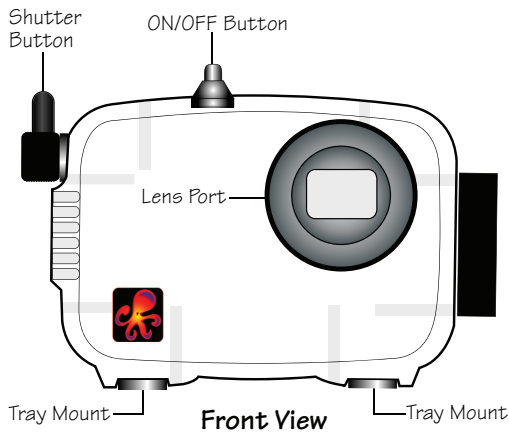

- | | | |
|------------------|-----------------|-----------------------|
| [1] Movie Record | [4] Left Arrow | [7] Menu |
| [2] Info | [5] OK | [8] Erase |
| [3] Playback | [6] Right Arrow | [9] Camera/Menu Guide |


Back View

3

AF35 Strobe Package #4035

The AutoFlash AF35 is a great compliment, and an effortless, affordable way to add a flash to your new Ikelite point-and-shoot camera system. Everything you need to get started is in the box. Just attach it to the bottom of your housing and start taking pictures!

#4035 AF35 kit includes the AF35 strobe, Flex arm, AutoFlash sensor, Handle with rubber grip, Single Tray, and Mounting hardware.

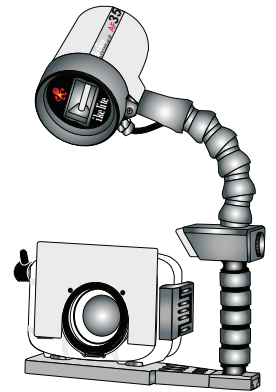

Please Read If Using an EV-Controller

Olympus Tough 3000, 6020, and 8010 model cameras may require an EV-Controller resistor update if your strobe is not firing when connected to the EV-Controller. Your DS strobe can be fired even when the update is needed by switching the EV-Controller to non-preflash mode. You can then fire your DS strobe in all manual power settings EXCEPT full power.

Go to www.ikelite.com for complete strobe and accessory info.



Ikelite Underwater Systems
50 W 33rd Street
Indianapolis, IN 46208 USA

When returning products send "attn. Repair Dept."

"general questions" e-mail: ikelite@ikelite.com
www.ikelite.com
317-923-4523