




Digital Housing

Supplemental Instructions

6280.26 Nikon L26, L28 ULTRACompact Housing

6280.27 Nikon L26 ULTRACompact Housing Package

6280.29 Nikon L28 ULTRACompact Housing Package

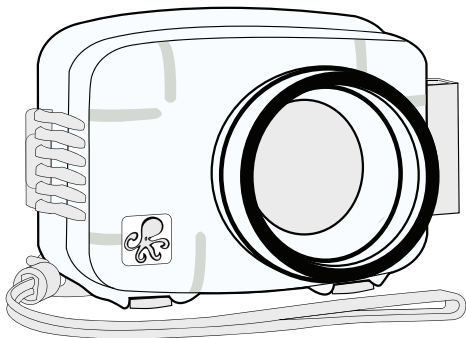

Housing Size and Weight (no camera installed)

Width6.2in (157mm) including controls


Height4.6in (117mm) including controls

Depth3.6in (91mm) including controls & lens port

Weight1.2lb (544g)



BuoyancySlightly positive in fresh water

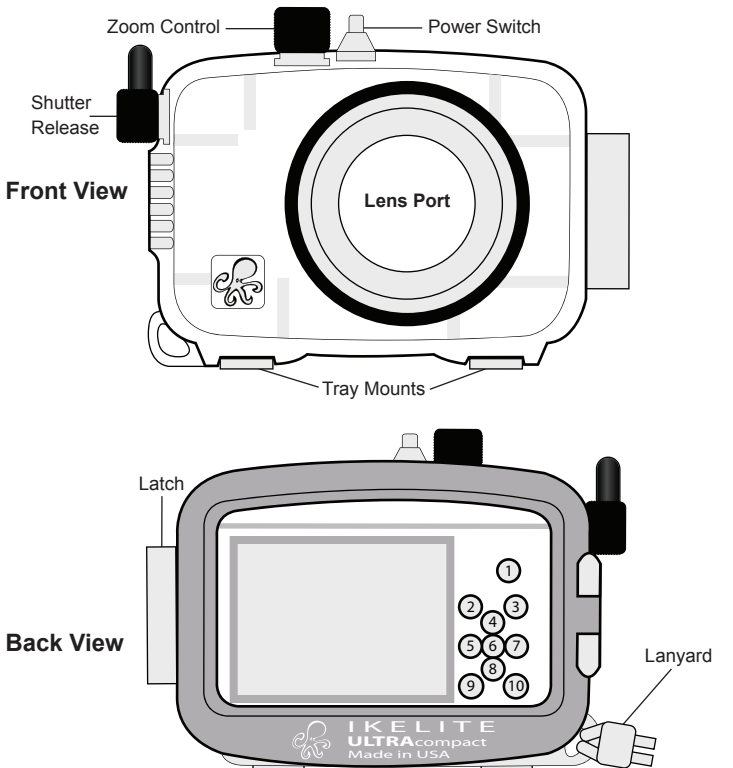Parts of the Housing




- | | | |
|---------------------------|------------------|----------------|
| 1. ● Movie-record Button | 5. ◀ Self-timer, | 9. MENU Button |
| 2. Shooting Mode Button | 6. ● OK | 10. Delete |
| 3. Playback Button | 7. Exp. Comp., | |
| 4. Flash Mode, | 8. Macro Mode, | |




L26 Initial Camera Settings

- Insert and format an SD memory card.
- Set Time Zone and Date.
- Set camera to “Auto  mode”, NOT Easy Auto or Scene Modes.
- Set Electronic VR to “Auto.”
- Set White Balance to “Auto.”
- Set Flash Mode to ON “  .”
- Set Image Mode to 16m.
- Set AF-assist to “Off.”
A strobe focusing light is recommended to assist AF underwater.
- Set Continuous to “S” Single.

For more accurate colors, we recommend setting manual white balance underwater using a white slate or white sandy bottom. Manual white balance should be reset for each working depth due to color absorption caused by the water. When adding a UR-Pro color filter, reset manual white balance.

Note: Enable Macro  mode when shooting close-up subjects. If overexposure occurs, back away from the subject and zoom in. If overexposure continues, use “-” exposure compensation.

L28 Initial Camera Settings

- Press the  button and set the shooting mode to  Auto Mode, not Easy Auto or Scene Modes.
- Set Flash to  “Fill Flash.”

Preset the following functions in the  Menu Settings:

- Set Image Mode to “20m.”
- Set White Balance to “Auto.”
- Set Continuous to “S” Single.
- Set Color Options to V1 “Vivid Color.”


Preset the following functions in the  Menu Settings:

- Set Autofocus Mode to “AF-S.”

Preset the following functions in the  Menu Settings:

- Set Time Zone and Date.
- Set Electronic VR to “Auto.”
- Set AF assist to “OFF.” A strobe focusing light is recommended to assist AF underwater.
- Set Auto off to “5m” and Sleep mode to “OFF.”
- Insert and format a SD or SDHC memory card.

For more accurate colors, we recommend setting manual white balance underwater using a white slate or white sandy bottom. Manual white balance should be reset for each working depth due to color absorption caused by the water. When adding a UR-Pro color filter, reset manual white balance.

Note: Enable Macro  mode when shooting close-up subjects. If overexposure occurs, back away from the subject and zoom in. If overexposure continues, use “-” exposure compensation.

External Accessory Lenses

W-20 and W-30 Wide-Angle Conversion Lenses


The front of the lens port accepts the Ikelite 6420 W-20, 6430 W-30, and other 67mm threaded wide angle or macro lenses without the need for an adapter. An external wide angle conversion lens increases angle of coverage so you can get closer to the subject while still fitting everything in the frame.

Slight to moderate vignetting will occur at widest angle camera lens setting with these lenses. Zoom in to eliminate, or crop the image in post processing. NOTE: The L26 and L28 will not vignette at widest angle setting underwater when using the W-30 lens.

Bayonet mount lenses cannot be used with this housing.

Please visit www.ikelite.com for additional information.


Ikelite 6430 W-30 Conversion Lens

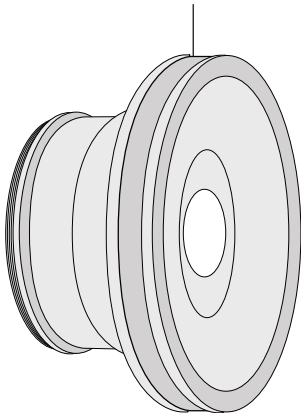

AF35 Strobe Package 4035

The AutoFlash AF35 kit is a great compliment, and an effortless, affordable way to add a flash to your new Ikelite point and shoot camera system. Everything you need to get started is in the box. Just attach it to the bottom of your housing and start taking pictures!

The AF35 Strobe Package is available to support your housing along with a full range of accessories. Please visit www.ikelite.com to see the most current information about recommended accessories for your housing.

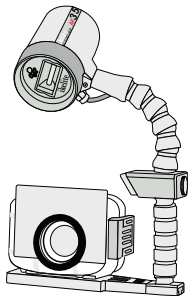

L26 and L28 AF35 Strobe Compatibility

AutoFlash AF35 Kits with a Serial Number below 1900 may overexpose when used with the Nikon Coolpix L26 or L28 camera system. AF35 Kits with a Serial Number of 1900 or greater do not require modification for use with the Nikon L26 or L28 camera. If necessary, strobes may be returned to Ikelite postage prepaid for a complimentary electronics update. Please include a brief letter of explanation with full contact information and send to the Ikelite Service Department at the address below.

*Ikelite Underwater Systems
Attention: Service Department
50 West 33 Street
Indianapolis, IN 46208 USA*

No reimbursements for postage paid will be issued.

You may also want to insure the package.

Technical Support

Please read the troubleshooting section of the ULTRACompact Housing Instruction Manual before contacting technical support.

Ikelite Technical Support

Email: ikelite@ikelite.com

Phone 317-923-4523

Fax 317-924-7988

Product Registration

Please visit www.ikelite.com to register your Ikelite housing within 15 days of purchase.



**Ikelite Underwater Systems
50 West 33rd Street
Indianapolis, IN 46208 USA**

www.ikelite.com