Ikelite Digital Housing


supplemental instructions


for

#6281.63 Nikon S630 ULTRAcompact Digital Housing



Housing Controls

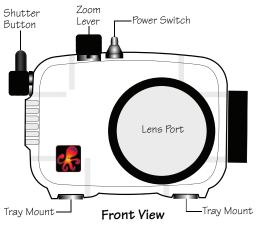

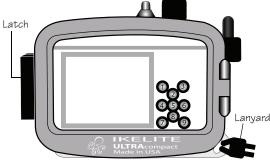

[1] Shooting Mode 27 Flash Mode

[3] Mode dial

- [4] Display [5] OK/Apply
 - [6] +/-
- [8] Macro [9] Delete

Back View

3

Camera Setup (Nikon S630)


- 1 Set to Shooting Mode (camera icon).
- 2. Set ISO to 64
- 3. Set flash to forced "ON" (lightning bolt).
- 4. Set metering to "Center-Weighted".
- 5. Set Autofocus mode to "Single AF".
- 6. Set AF area mode to "center".

NOTE: If over-exposure occurs, back away from the subject and then zoom in as necessary. This will also cause an increase in shutter speed and a smaller aperture setting.

Ikelite W-20 Wide-Angle Conversion Lens #6420

An external wide angle conversion lens increases angle of coverage, so you can get much closer to your subject while still fitting everything in the frame. Add an Ikelite W-20 or other 67mm wide-angle conversion lens to improve your angle of coverage in any shooting situation.

Slight vignetting may occur at widest angle camera lens setting. Zoom in slightly to eliminate, or crop the image in post-processing.

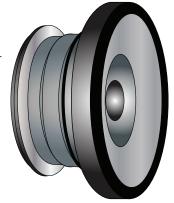

NOTE: Bayonet mount lenses cannot be used with this housing.

2

AF35 Strobe Package #4035

The AutoFlash AF35 kit is a great compliment, and an effortless, affordable way to add a flash to your new Ikelite point-and-shoot camera system. Everything you need to get started is in the box. Just attach it to the bottom of your housing and start taking pictures!

AF35 AutoFlash kit includes:

AF35 strobe Flex arm AutoFlash sensor Handle with rubber grip Tray (single or dual) Mounting hardware



Go to www.ikelite.com for complete strobe and accessory info.



Ikelite Underwater Systems 50 W 33rd Street Indianapolis, IN 46208 USA

When returning products send "attn. Repair Dept."

"general questions" e-mail: ikelite@ikelite.com www.ikelite.com 317-923-4523

ULTRAcompact Supplemental 6281.63-02-1209