



# Viewfinder Compatibility for Ikelite Housings

This chart provides the correct 45° Magnified Viewfinder option, Type 1, 2, 3, or 4 for most Ikelite Housings for DSLR and Mirrorless Interchangeable Lens (MIL) cameras.

The last column lists compatibility of the Straight Enhanced Magnifying Viewfinder. Up or down refers to the position of the viewfinder in relation to the housing. Some housings may have controls which cause interference with the viewfinder body. “Up” means the viewfinder may be positioned with the eyepiece rotated towards the top of the housing. “Down” means the viewfinder may be positioned with the eyepiece rotated towards the bottom of the housing.

We do not offer adapters for the use of Ikelite Magnified Viewfinders with housings produced by other manufacturer.

## HELPFUL LINKS

[Straight vs 45 Degree Magnified Viewfinder for Underwater Shooting](#)

[Installing a Magnifying Viewfinder \[VIDEO\]](#)

# Nikon Cameras

	Housing	45° Viewfinder	Straight Enhanced Viewfinder Position
<b>Nikon D100</b>	6810	Not confirmed	Not confirmed
<b>Nikon D200</b>	6812	Not confirmed	Not confirmed
<b>Nikon D300</b>	6812.3	Type 1 or 3	Not confirmed
<b>Nikon D3000</b>	6801.30	Not confirmed	Not confirmed
<b>Nikon D300S</b>	6812.31	Type 1 or 3	Not confirmed
<b>Nikon D3100</b>	6801.31	Not confirmed	Not confirmed
<b>Nikon D3200</b>	6801.32	Type 1 or 3	Not confirmed
<b>Nikon D3300</b>	6801.33	Type 1 or 3	Not confirmed
<b>Nikon D3300, D3400</b>	6801.34	Type 1 or 3	Up or down
<b>Nikon D3500</b>	6901.35	Type 1 or 3	Not confirmed
<b>Nikon D40 Nikon D60</b>	6804.1	Not confirmed	Not confirmed
<b>Nikon D50</b>	6805.1	Not confirmed	Not confirmed
<b>Nikon D500</b>	6812.5 71005 73005	Type 1 or 3	Up or down
<b>Nikon D5000</b>	6801.50	Type 1 or 3	Not confirmed
<b>Nikon D5100</b>	6801.51	Type 1 or 3	Not confirmed
<b>Nikon D5200</b>	6801.52	Type 1 or 3	Not confirmed
<b>Nikon D5300</b>	6801.53	Type 1 or 3	Not confirmed
<b>Nikon D5500, D5600</b>	6801.55	Type 1 or 3	Not confirmed
	6901.56	Type 1 or 3	Not confirmed
<b>Nikon D600, D610</b>	6812.6 6812.61	Type 2	Not confirmed

	Housing	45° Viewfinder	Straight Enhanced Viewfinder Position
Nikon D70	6807 6807.1	Type 2	Not confirmed
Nikon D700	6812.7	Type 1 or 3	Not confirmed
Nikon D7000	6801.70	Type 2	Not confirmed
Nikon D7100, D7200	6801.71 6801.72 71001	Type 2	Up or down
Nikon D750	6812.75 71007	Type 1 or 3	Up or down
Nikon D7500	71017	Type 2	Up or down
Nikon D780	6891.3	Type 3	Up or down
Nikon D80	6808.1	Not confirmed	Not confirmed
Nikon D800	6812.8 71011	Type 1 or 3	Up or down
Nikon D810	6812.81 71009	Type 1 or 3	Up or down
Nikon D850	71015	Type 1 or 3	Up or down
Nikon D90	6809.1	Type 2	Not confirmed
Nikon Z5	71067	Type 3	Up or down
Nikon Z50	71065	Type 3	Up or down
Nikon Z6, Z6 II, Z7, Z7 II	71063	Type 3	Up or down
Nikon Z8	71069	Type 3	Up or down

## Canon Cameras

	Housing	45° Viewfinder	Straight Enhanced Viewfinder Position
Canon 1000D Rebel XS	6872.10	Not confirmed	Not confirmed

	<b>Housing</b>	<b>45° Viewfinder</b>	<b>Straight Enhanced Viewfinder Position</b>
<b>Canon 100D Rebel SL1</b>	6970.01 6970.03	Type 1 or 3	Up or down
<b>Canon 200D Rebel SL2</b>	6970.05 6970.06	Type 1 or 3	Up or down
<b>Canon 250D Rebel SL3</b>	6970.08 6970.09	Type 1 or 3	Up or down
<b>Canon 10D</b>	6871.10 6871.11	Type 1 or 3	Not confirmed
<b>Canon 1100D Rebel T3</b>	6872.11	Not recommended	Not confirmed
<b>Canon 1200D Rebel T5</b>	6872.12	Not recommended	Not confirmed
<b>Canon 20D</b>	6871.20	Type 1 or 3	Not confirmed
<b>Canon 300D Rebel</b>	6870 6870.1	Not confirmed	Not confirmed
<b>Canon 30D</b>	6871.30	Type 1 or 3	Not confirmed
<b>Canon 350D Rebel XT</b>	6871.35	Not confirmed	Not confirmed
<b>Canon 400D Rebel XTi</b>	6871.40	Not confirmed	Not confirmed
<b>Canon 40D</b>	6870.40	Type 1 or 3	Not confirmed
<b>Canon 40D, 50D</b>	6870.50	Type 2	Not confirmed
<b>Canon 450D Rebel XSi</b>	6871.45	Type 2 Limited rotation	Not confirmed
<b>Canon 500D Rebel T1i</b>	6871.50	Type 2 Limited rotation	Not confirmed
<b>Canon 550D Rebel T2i</b>	6871.55	Type 2	Not confirmed
<b>Canon 5D</b>	6871.05	Type 1 or 3	Not confirmed
<b>Canon 5D Mark II</b>	6871.02 71700	Type 1 or 3	Up only
<b>Canon 5D Mark III Canon 5DS, 5DS R</b>	6871.03 6871.04	Type 2	Down only

	Housing	45° Viewfinder	Straight Enhanced Viewfinder Position
Canon 5D Mark III, Mark IV Canon 5DS, 5DS R	6871.09 71702 73702	Type 2	Down only
Canon 600D Rebel T3i	6871.60	Type 2	Not confirmed
Canon 60D	6870.60	Type 2	Not confirmed
Canon 650D Rebel T4i	6871.65	Type 2	Not confirmed
Canon 6D	6871.06 71706	Type 2	Down only
Canon 6D Mark II	71720	Type 2	Down only
Canon 70D	6870.70	Type 2	Not confirmed
Canon 700D Rebel T5i	6871.65	Type 2	Not confirmed
Canon 750D Rebel T6i	71718	Type 2	Down only
Canon 7D	6871.07 71704	Type 2	Down only
Canon 7D Mark II	6871.08 71708	Type 2	Down only
Canon 80D	6870.80 71710	Type 2	Down only
Canon 850D Rebel T8i	71728	Type 2	Not confirmed
Canon 90D	71726	Type 2	Up or down
Canon M5	6973.05	Type 1 or 3	Up or down
Canon R	71760	Type 3	Up or down
Canon R5	71764	Type 3	Up or down
Canon R5 II	71765	Type 4	Up or down
Canon R6	71766	Type 3	Up or down
Canon R7	69746	Type 4	
Canon R10	69742	Type 4	

	Housing	45° Viewfinder	Straight Enhanced Viewfinder Position
Canon RP	71762	Type 3	Up or down

## Olympus, Panasonic, Sony Cameras

	Housing	45° Viewfinder	Straight Enhanced Viewfinder Position
Olympus E-1	6851	Not confirmed	Not confirmed
Olympus E-3	6851.3	Not confirmed	Not confirmed
Olympus E-30	6852.30	Not confirmed	Not confirmed
Olympus E-300	6853	Not confirmed	Not confirmed
Olympus E-330	6853.30	Not confirmed	Not confirmed
Olympus E-410 Olympus E-420	6854.10	Type 2	Not confirmed
Olympus E-500	6855	Not confirmed	Not confirmed
Olympus E-510 Olympus E-520	6856.20	Not confirmed	Not confirmed
Olympus OM-D E-M1 II	6952.02 69532	Type 1 or 3	Up or down
Olympus OM-D E-M1 III	6952.03	Type 1 or 3	Up or down
Olympus OM-D E-M5	6950.51	Type 2	Not confirmed
Olympus OM-D E-M5 II	6950.52	Type 1 or 3	Not confirmed
Olympus OM-D E-M10	6950.10	Type 1 or 3	Not confirmed
Olympus OM-D E-M10 II	6950.12	Type 1 or 3	Up or down
Olympus OM-D E-M10 III	69531	Type 1 or 3	Up or down

	Housing	45° Viewfinder	Straight Enhanced Viewfinder Position
<b>OM System OM-1</b>	69540	Type 3	Up or down
<b>Panasonic G9</b>	71307	Type 1 or 3	Up or down
<b>Panasonic G85 Panasonic G80</b>	6961.08	Type 1 or 3	Up or down
<b>Panasonic GH3 Panasonic GH4</b>	6860.03	Type 1 or 3	Not confirmed
<b>Panasonic GH5, GH5 II</b>	71305 71311	Type 1 or 3	Not compatible
<b>Panasonic S5</b>	71309	Type 1 or 3	Down only
<b>Samsung NX1</b>	6821.01	Type 2	Not confirmed
<b>Sony A1</b>	71476	Type 1 or 3	Up only
<b>Sony A7, A7R, A7S</b>	6843.71 71471	Type 1 or 3	Up only
<b>Sony A7 II, A7R II, A7S II</b>	6843.72 71472	Type 1 or 3	Up only
<b>Sony A7 IV</b>	71479		
<b>Sony A7R III, A9</b>	71473	Type 1 or 3	Up only
<b>Sony A7R IV</b>	71474	Type 1 or 3	Up only
<b>Sony A7R V</b>	71479	Type 3	Up or down
<b>Sony A7S III</b>	71475 71476	Type 1 or 3	Up only
<b>Sony A100</b>	6841	Not confirmed	Not confirmed
<b>Sony A200</b>	6841.20	Not confirmed	Not confirmed
<b>Sony A300 Sony A350</b>	6841.35	Not confirmed	Not confirmed
<b>Sony A230 Sony A330 Sony A380</b>	6841.38	Not confirmed	Not confirmed

	<b>Housing</b>	<b>45° Viewfinder</b>	<b>Straight Enhanced Viewfinder Position</b>
<b>Sony A700</b>	6841.7	Not confirmed	Not confirmed
<b>Sony A33 Sony A55</b>	6842.55	Type 1 or 3	Not confirmed
<b>Sony A57 Sony A65</b>	6842.65	Type 1 or 3	Not confirmed