




Digital Housing

Supplemental Instructions

6282.68 Nikon Coolpix S6800

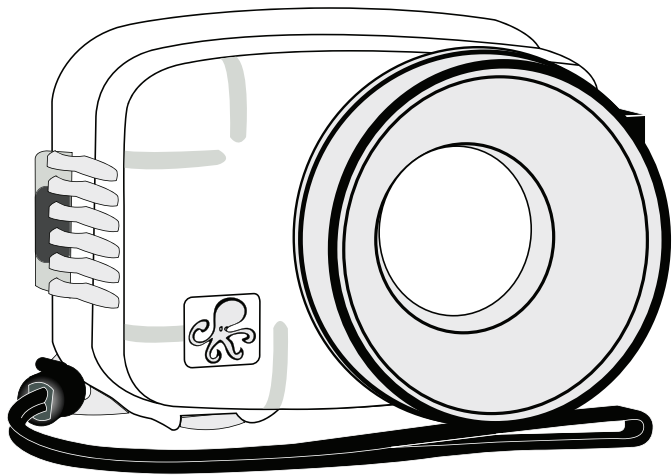

Thank you for your purchase of Ikelite equipment. Please read the "Instruction Manual" and "Supplemental Instructions" completely before attempting to operate or dive with this product.


Supplied Accessories

- 0200.08 Vinyl Port Cover
- 0321.10 Safety Lanyard
- Flash Diffuser
- Flash Deflector
- 0184.1 Silicone Lubricant
- Extra Control Tips and Sleeves

Housing Specifications

Controls	All camera functions
Width	5.8 in (147 mm) including controls
Height	4.5 in (114 mm) including controls
Depth	4.8 in (122 mm) including controls
Weight	1.6 lb (726 g)
Buoyancy	Slightly positive in freshwater
Depth Rating	200 ft (60 m)
Built-in Flash	Yes
Strobe Connection	Slave or Fiber Optic use with 4402 IkeliteUniversal Fiber Optic Mount Kit
Main O-Ring0132.45
Port O-Ring0103
Port Outer Diameter	3.9" (99 mm)
Use 46mm Lenses.....	No
Use 67mm Lenses.....	Macro lenses only with 9306.82 Macro Adapter
Use Bayonet Lenses	No

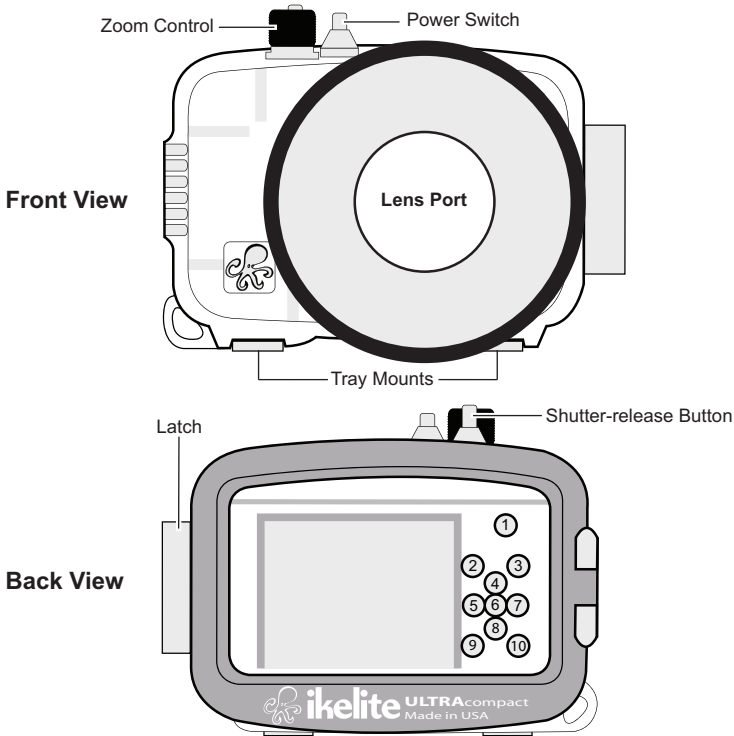


Parts of the Housing



1. ●▶ Movie-record Button
2. 📷 Shooting Mode Button
3. ▶ Playback Button
4. ⚡▲ Flash Mode, Up Arrow
5. ◀ Self-timer, Left Arrow

6. OK/Apply Selection Button
7. ⏏▶ Exp. Comp./Right Arrow
8. 🌸▼ Macro Mode/Down Arrow
9. MENU Button
10. 🗑 Delete Button


Initial Camera Settings (before placing camera in housing)

- Insert a fully charged battery.
- Set Shooting Mode to  "Auto Mode."
- In **Shooting Menu**:
 - Set Image mode to "16m."
 - Set White balance to "Auto." If more accurate colors are desired, we recommend setting manual white balance underwater using a white slate or white sandy bottom. Manual white balance should be reset for each working depth due to color absorption caused by the water. When adding a UR-Pro color filter, reset manual white balance for each working depth.
 - Set Continuous to "S" Single.
 - Set ISO sensitivity to "200."
 - Set AF area mode to "Center" and Autofocus Mode to "AF-S" Single AF.
 - Set Quick effects to "Off."
- In **Setup Menu**:
 - Set Time Zone and Date.
 - In Monitor Settings set Image Review to "ON."
 - Set Photo VR to "On."
 - Set Motion Detection, AF-assist beam and Digital Zoom to "Off."
 - Set Auto off to "5 min."
 - Insert and format a SD or SDHC memory card.
 - Set Blink warning to "OFF."
- Set Flash Mode to "Fill flash .
- Set Macro mode  to "On" when shooting close-up. If the image is overexposed, use "-" exposure compensation and/or back away, zoom in, and then reshoot.

External Accessory Lenses


WD-4 Wide-Angle Conversion Dome 6430.4

The removeable WD-4 corrects light refraction underwater, restoring the camera's original angle of coverage. Approximately 3/4 of the camera's zoom range can be used with the dome in place. Slight vignetting may occur at camera's widest angle setting.

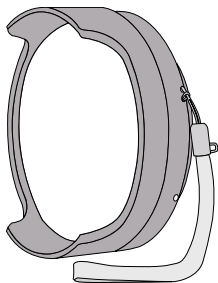

External Macro Adaptor 9306.82


Allows attachment of 67mm threaded macro lenses from Inon and Epoque. NOT for use with 67mm threaded wide-angle lenses.

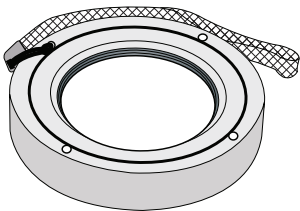

Note: Other wide angle conversion or accessory lenses cannot be used with this housing.

AF35 Strobe Package 4035

The AutoFlash AF35 kit is a great compliment, and an effortless, affordable way to add a flash to your new Ikelite point and shoot camera system. Everything you need to get started is in the box. Just attach it to the bottom of your housing and start taking pictures!

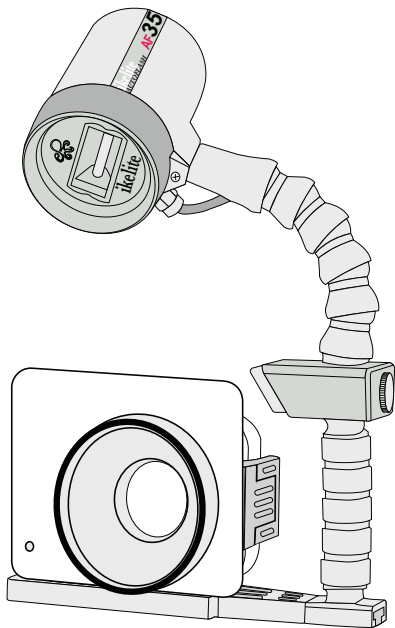

The AF35 Strobe Package is available to support your housing along with a full range of accessories. Please visit www.ikelite.com to see the most current information about recommended accessories for your housing.

Customer Support

Please read the troubleshooting section of the “Instruction Manual” before contacting Ikelite.

Limited Warranty

This Ikelite product is warranted against any manufacturing defects for a period of one (1) year from the original date of purchase. Defective products should be returned to Ikelite postage paid. Ikelite will, at its sole discretion, repair or replace such products, and will return to customer postage paid. All other claims of any nature are not covered. Except as mentioned above, no other warranty expressed or implied applies to this Ikelite product.



**Ikelite Underwater Systems
50 West 33rd Street
Indianapolis, IN 46208 USA**

www.ikelite.com

© 2014 Ikelite Underwater Systems

6282.68_ Nikon_S6800_1-0414