



## 1887.3 Quick Release Kit for Gamma


This mount kit is super lightweight, flexible, and includes everything you need to attach your Gamma to an Ikelite release handle for use as a focus assist or macro video light. Compatible Ikelite trays with release handle(s) are available to fit most Ikelite and non-Ikelite compact digital systems, sold separately. *Gamma flashlight not included.*

### Assembly Instructions - see Diagram A, Page 3


1. Place a thin film of lubricant around the *attachment points* to assist in assembly of each component.
2. Press all components together as shown in Diagram A, Page 3.
3. Rotate the Strap Knob counterclockwise until the small end of the Gamma slides into the Flashlight Mount.
4. Rotate Strap Knob clockwise to tighten Strap around Gamma light. DO NOT overtighten! Overtightening may cause the strap threads to skip.
5. Adjust Gamma to desired position.  
To attach the 1870 Diffuser to your Gamma Light, rotate the diffuser clockwise to thread into the front of the Gamma. DO NOT overtighten or cross-thread.
6. Depress Push Button on your Quick Release Handle with one hand. With your other hand, slide the Prong Mount into the handle top and release Push Button.  
**NOTE:** When properly attached, the Push Button should spring back to its original position locking the Prong Mount in the Handle.

## Included in Kit

- 1870 Diffuser with Lanyard
- 4 Piece 1/2" Flex Extension
- Quick Release Short Prong Mount
- 1cc Silicone Lubricant
- Flashlight Mount for Flex Systems
- 1/2"-3/4" Adapter

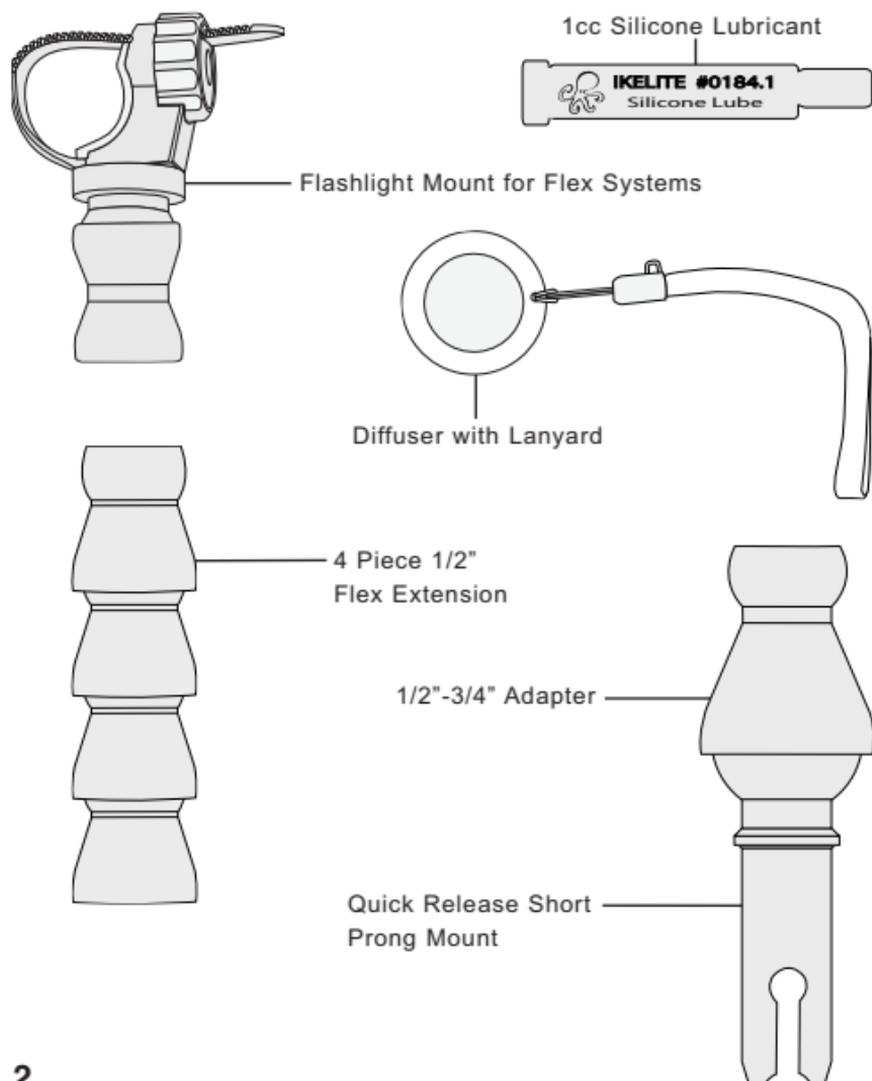

## Diagram A

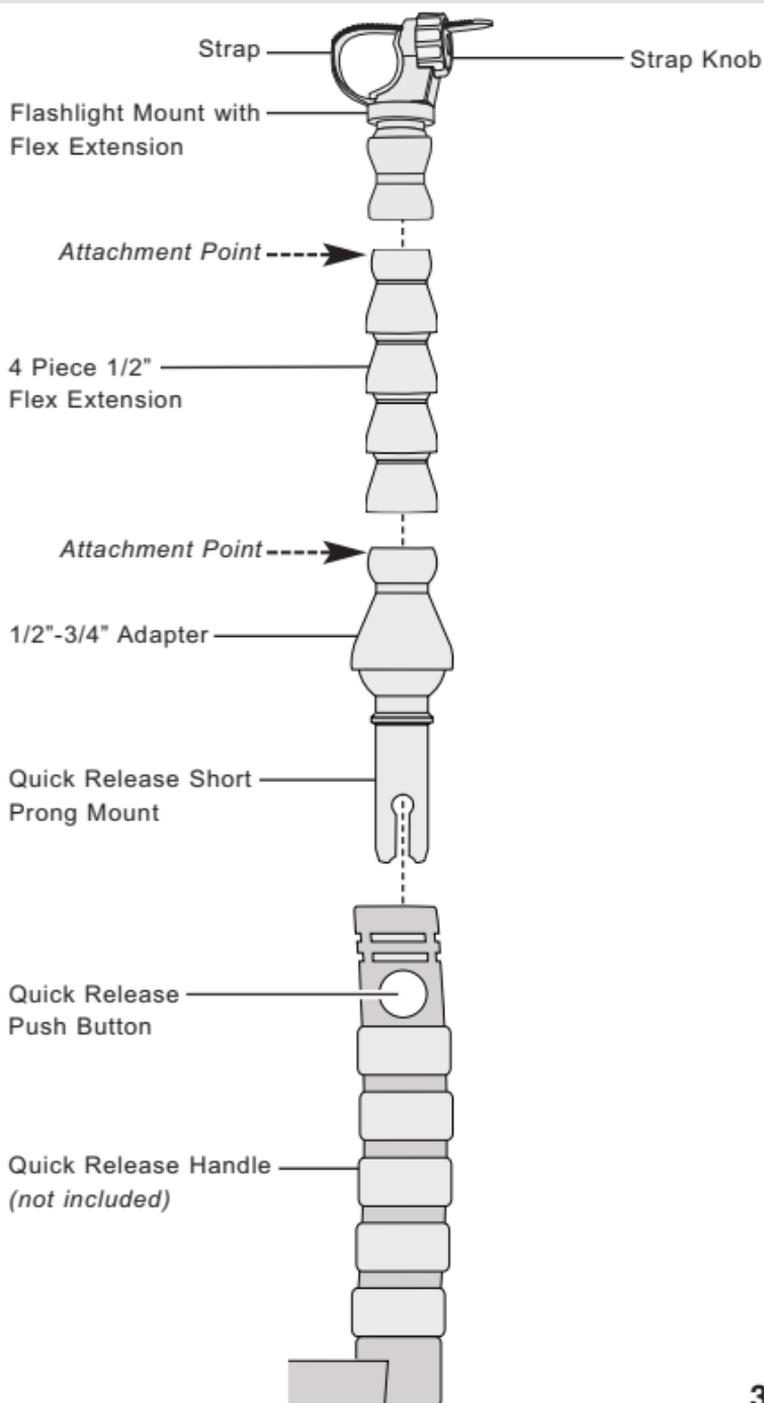



**Ikelite Underwater Systems  
50 West 33rd Street  
Indianapolis, IN 46208 USA**

**[www.ikelite.com](http://www.ikelite.com)**

© 2014 Ikelite Underwater Systems