



B1A Bulkhead

Product # 46002

Included in the Box

- B1A Bulkhead # 46002

Important Notices

- » **It is recommended to vacuum test and water pressure test or take the housing to depth without a camera installed after installing or replacing the bulkhead.**
- » **Do not submerge without a compatible plug or waterproof bulkhead cap attached.**
- » **Always attach a waterproof bulkhead cap when not in use.**


Installation and Use

Installing the B1A Bulkhead

1. Carefully remove the existing bulkhead or accessory port plug using an 11/16" wrench.
2. Remove the nut from the end of the bulkhead with the cord coming out. Check that the sealing surface and o-ring on the bulkhead are clean. No lubricant is necessary.
3. Thread the bulkhead into the 1/2-20 hole in the top of the housing being careful not to cross-thread.
4. Use an 11/16" wrench to carefully tighten down the bulkhead just until it touches the case. Do not over-tighten.
5. Re-attach the nut on the inside of the case. Tighten snug with a 5/8" wrench.

Installing the Hotshoe

1. Align hotshoe and bulkhead connector ends and push together until tab clicks into place.

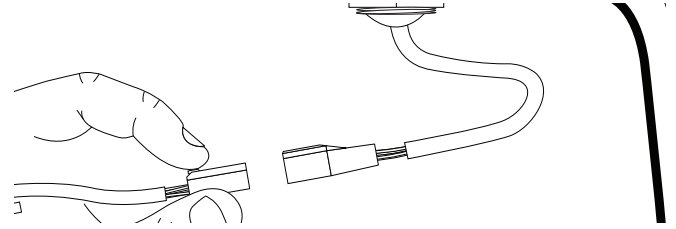

Maintenance and Storage

Post-Dive

1. Submerge the fully assembled system in clean, fresh water after each use.
2. Remove the system from the rinse tank and flush with running fresh water.
3. Dry the system with a clean, lint-free cloth.
4. Separate the plug or cap from the bulkhead and lubricate the threads and o-ring(s) every 1-2 days during continuous use and prior to storage.

Limited Warranty

This Ikelite product is warranted against any manufacturing defects for a period of one (1) year from the original date of purchase. To obtain warranty service, the product must be returned to Ikelite postage paid. Ikelite will, at its sole discretion, repair or replace such products, and will return to customer postage paid. All other claims of any nature are not covered. Except as mentioned above, no other warranty expressed or implied applies to this Ikelite product.

